




VLeaF

Package Includes

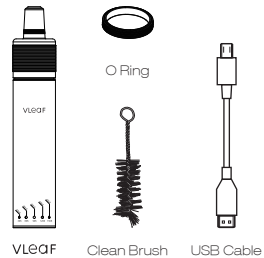

VLeaF

Clean Brush

USB Cable



Stainless Steel Mesh
(Mesh Number: 200)



Packing Tool



Water Pipe Adaptor


Getting Started

1. Twist and pull off the top cap.



Getting Started

2. Load grinded materials into the ceramic bowl.

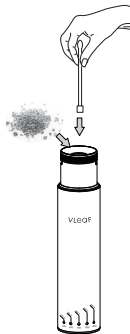

(We only recommend loading 0.1g – 0.3g of material each time to get the best vaping experience.)

3. Twist and press on the top cap.



Getting Started

4. Quickly press the power button 5 times to turn on VLeaF. Press and hold the power button for 2 seconds to start your session. After flashing for about 30 seconds, the LED will remain lit to indicate that VLeaF is ready for use!



LED Indicator

Power Button

For additional information and instructions, please visit us at www.vivant.com

VIVANT INC.

Address:

3059 Edinger Ave, Tustin, CA 92780 USA


E-mail: info@vivant.com

Tel: +1 844-8-VIVANT (+1 844-884-8268)

Web: www.vivant.com

Charging

To charge, connect VLEaF to a wall adapter via the USB cable. We recommend using a 1 Amp wall adapter.

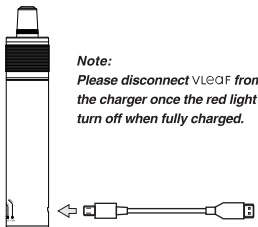

Note:
Please disconnect VLEaF from the charger once the red light turn off when fully charged.

Reset

Reset To Factory Default Settings

When the device is off, press and hold the power button for 10 seconds to restore the factory default settings. The LED will remain lit for 5 seconds to confirm that reset has been completed.



10 Seconds

Power Indicator

While the device is on, simply press the power button once to show the battery life. While the device is off, quickly pressing the power button 3 times will also display the battery life. Battery life remaining is displayed by the LED in the format below:




Power Button

- 80-100% battery life
- 60-79% battery life
- 40-59% battery life
- 20-39% battery life
- 0-19% battery life

Setting Your Temperature


Quickly press the power button 2X while the device is ON to adjust the temperature. The LED will flash below the temperature markings to indicate the current temperature level. Press the power button once to increase to the next temperature level. You may cycle through the five temperature levels this way to reach your desired temperature setting.

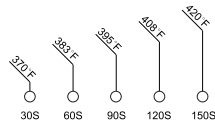

Press and hold the power button until the LED turns off to confirm and exit the temperature adjustment setting. Alternatively, you may simply wait until the LED turns off automatically to confirm and exit the temperature adjustment setting.

Timing Your Session

Press the power button 2x while the device is OFF to adjust the session timer. The LED will flash above the timer markings to indicate the current session time. Press the power button once to increase to the next session time. You may cycle through the five session timer times this way to reach your desired timer setting.

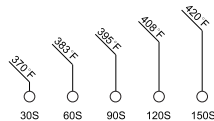

Press and hold the power button until the LED turns off to confirm and exit the timer adjustment setting. Alternatively, you may simply wait until the LED turns off automatically to confirm and exit the timer adjustment setting.

Warranty

Vivant Product Replacement

This warranty provides free replacement of an authentic Vivant product if it malfunctions due to manufacturing defects. This warranty does not cover artificial or accidental damage.

Void of Warranty

Any one of the following conditions will void the warranty:

1. Failure to provide original receipt of purchase.
2. Product failure or damage due to improper use or unauthorized repair or alteration.
3. Product failure or damage due to the use of excessive force or user negligence (i.e. dropping the device, submerging the device in liquids, etc.).
4. Product failure or damage caused by using incompatible parts or wires (i.e. using the wrong power cable, etc.).

Voiding the warranty is not limited to the conditions stated above. This warranty only covers authentic Vivant brand products and is valid for two years from the user's date of purchase.